




Terrasoft®

Wheel stop

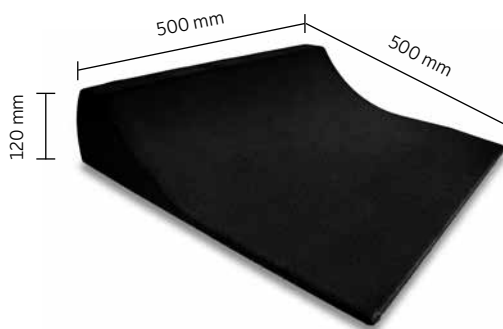

To give drivers stopping in front of walls or in parking bays an orientation as to how far they can drive their vehicles forward, it's often necessary to improvise with stones or wheel chocks. The Terrasoft wheel stop puts an end to this. The element made of highly compacted rubber granulate is simply placed in the desired position and, if necessary, glued at specific points. This is particularly necessary in public car parks or underground garages to prevent theft. The cars drive up to the wheel stop and stop when they can't go any further. The flexible material is gentle on tyres and rims.




ADVANTAGES

- Easy to install and fix to the floor
- Made from highly compacted SBR rubber granulate
- Colour: black

APPLICATION

The Terrasoft wheel stop is used in garages or car parks as well as underground car parks. There it ensures that vehicles are stopped safely in front of walls or other cars. The wheel stop is also the first choice for rather cramped parking spaces on company premises or private property.

MORE INFORMATION
WWW.CONRADI-KAISER.COM

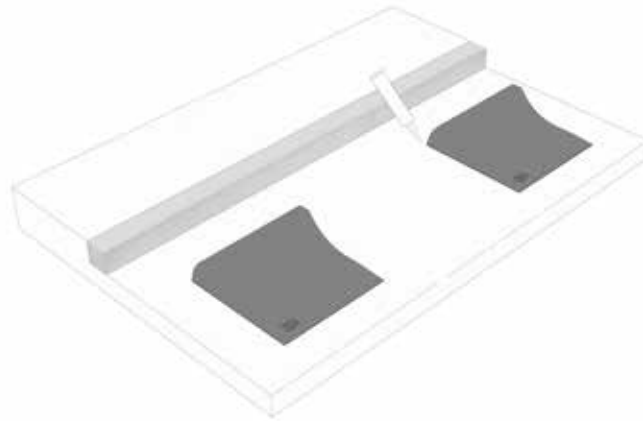

Quick and easy: The wheel stop is the perfect spacer - to protect the bodywork from marks and scratches.

INSTALLATION INSTRUCTIONS

Terrasoft Wheel Stop can easily be placed on existing surfaces, for example in garages or car parks. In order to ensure additional stability of the elements with each other, it is recommended to apply a spot adhesive with the cartridge adhesive (Item-no. 452500131).

Preparation of the subsoil

Before installing, the subsoil must be compressed and fixed. Please pay attention that the adhesion areas are free from oil, grease and other residues e.g. colour, rubber adhesion, etc.

Notes to selective gluing:

Pierce the membrane in the threaded part of the adhesive cartridge and screw on the cut plastic nozzle. Using a screwdriver, remove the bottom plate of the cartridge and insert it into the manual or pneumatic gun.

The bonding takes place on the completely cleaned underground by means of adhesive dots on the back side of the two beiden Kerbstone ramps. According to local belongings (e.g. snow-clearer, mechanical road cleaning etc.) the cable crossing must be temporarily removed. So just glue the cable crossings together at the herms, Do NOT glue them with the ground.

The surface and ambient temperature must be at least 5 ° C. The Elements should only be glued in dry weather. Adhesive cartridges must not be stored below 10 ° C.



Garages and parking slots



4 260212 999752

Terrasoft Wheel stop
black

Colours



-13x
black

Specifications



Spare parts



4525001x1
Gluing